



Rectangular & Square Floor Boxes

INSTALLATION MANUAL





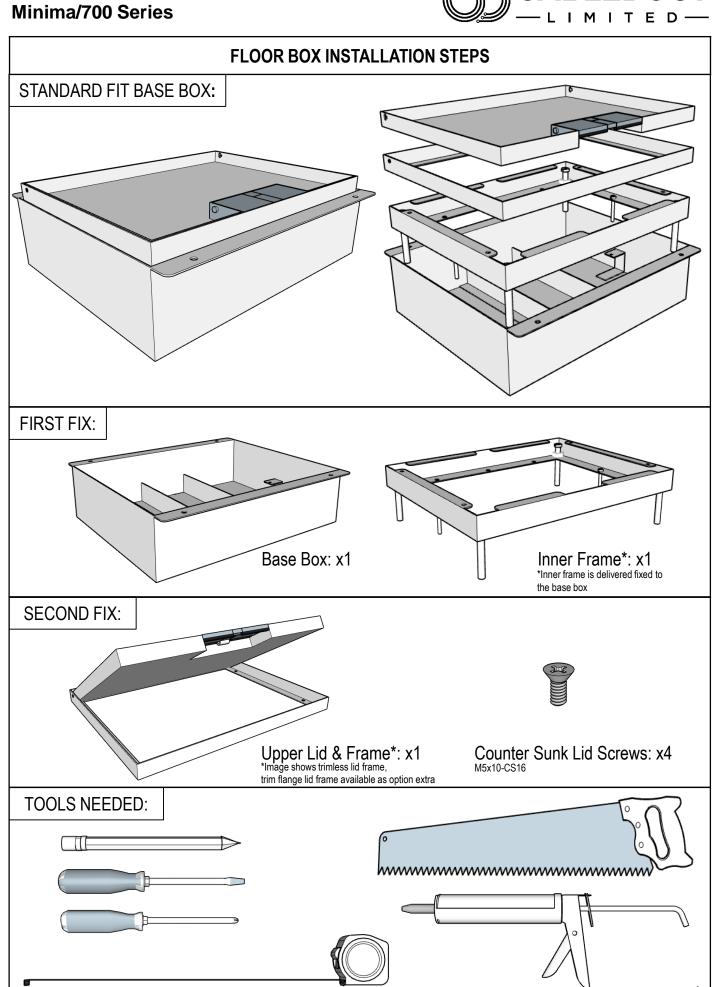


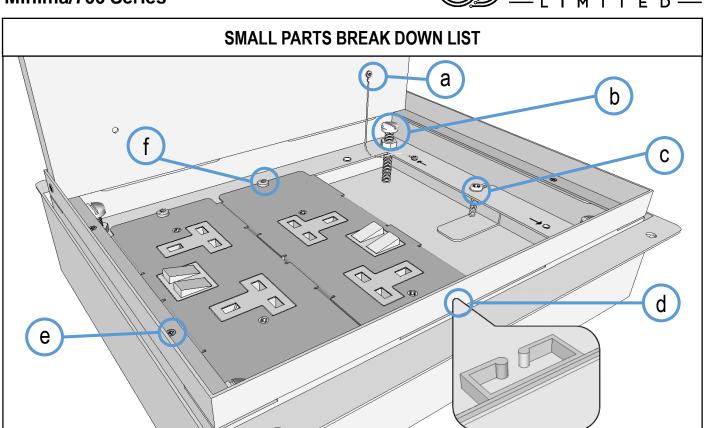

Ref	Item Description		Product Code	Quantity
а		Earth Cable, Earth Screws & Washers	Earth Cable: EARTHWIRE-175mm Earth Screws: M5x4-PH Washers: WASHER-M5x2BA	Earth Cable: 2x Earth Screws: 4x Washers: 4x Per Floor Box
b	Fitted & Fixed	Height Adjustment Bolts & Lock Nuts	65mm Base: M8x45-CH 85mm Base: M8x65-CH 120mm Base: M8x80-CH Lock Nut: NUT-M8	Adjustment Bolts: 4x Lock Nuts: 4x Per Floor Box
С	Supplied	Base & Frame Fixing Screw	65mm Base: M5x20-POZI 85mm Base: M5x40-POZI 120mm Base: M5x40-POZI	2x Per Floor Box
d		Cable Guide	500-CABLE-GUIDE	1 & 2 Compartment Floor Boxes: 1x 3 & 4 Compartment Floor Boxes: 2x
е	l Bagged	Counter Sunk Lid to Frame Fixing Screws	M5x10-CS16	4x Per Floor Box
f	Supplied	Outlet Plate Fixing Screws	M5x6-PH	2x Per Outlet Plate

ALL SMALL PARTS ARE AVAILABLE FOR INDIVIDUAL ORDER.




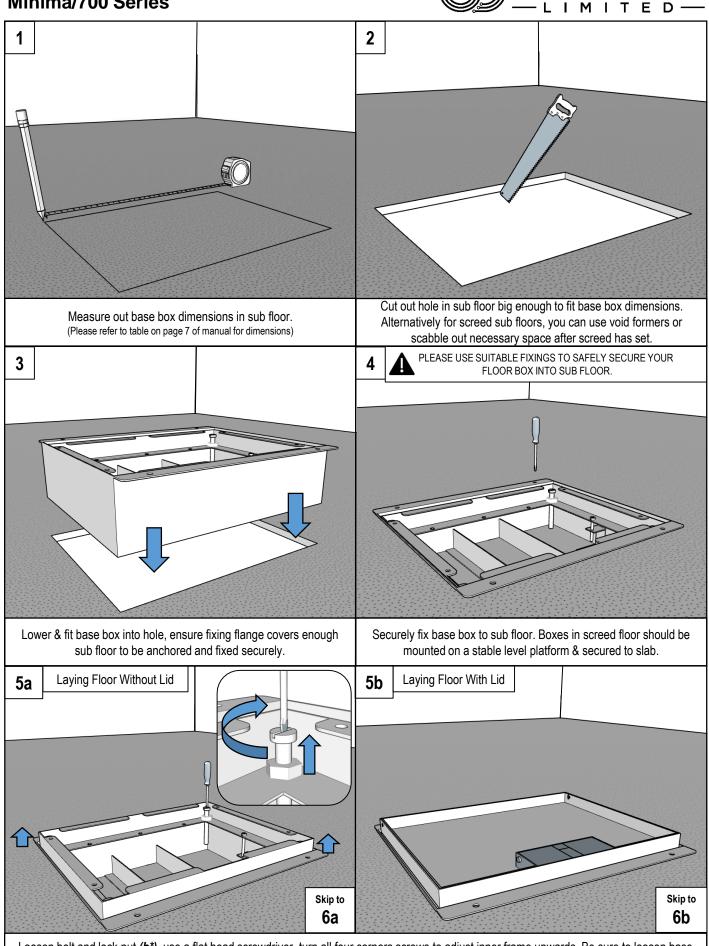


Loosen bolt and lock nut (b*), use a flat head screwdriver, turn all four corners screws to adjust inner frame upwards. Be sure to loosen base and frame fixing screw too (c*). This will be the template to fit your surrounding final floor. Alternatively, if floor box has been supplied with lid and frame, use the outside dimensions of frame as surrounding floor guide.

Refer to small parts list on page 2




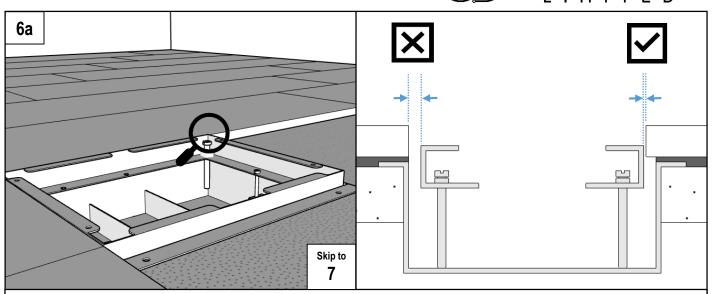

When laying your surrounding floor finish, be sure to use the outside edge of the frame as your final floor finish template and not the edge of the base box as this can leave a large, unsightly gap between the floor finish and the lid.

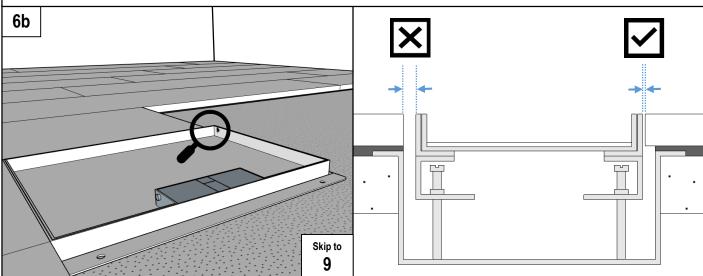


Alternatively if you are installing complete floor boxes, lay your surrounding floor finish close to outside edge of the lid frame and not the edge of the base box as this can leave a large, unsightly gap between the floor finish and the lid.

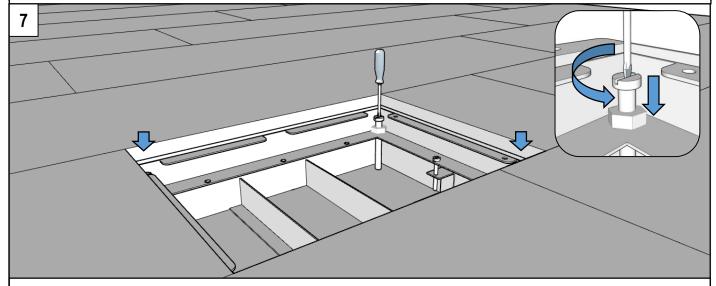


Using a flat head screwdriver, turn all four corner screws to adjust inner frame downwards, allowing for lid and lid frame to sit flush with your final floor finish, retighten lock nut.




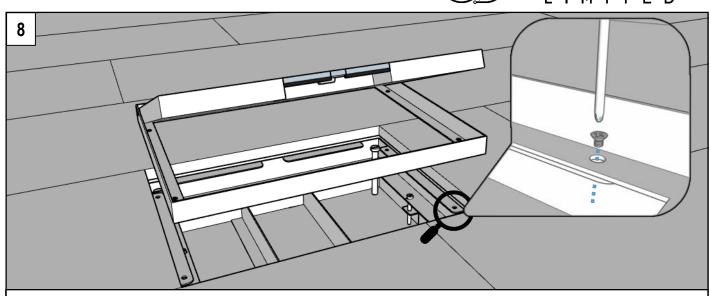

Using the four M5x10mm (e*) counter sunk screws supplied, fix the lid frame to the inner frame via the holes provided.

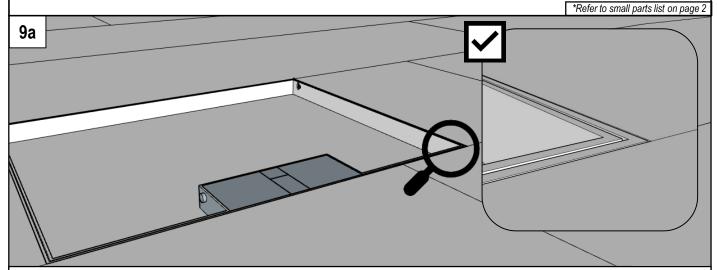

The trim edge of your floor box lid and lid frame should be flush with final floor. Please see **9b** and **9c** for trim flange lid options.

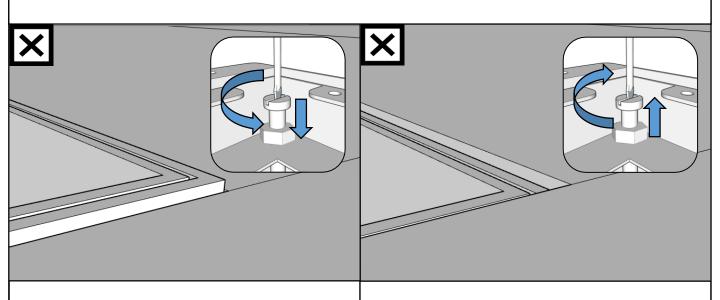


If lid and lid frame is too high, readjust downwards. You may need to loosen and retighten lock nut.

If lid and lid frame is sitting low, readjust upwards. You may need to loosen and retighten lock nut.

INSTALLATION MANUAL



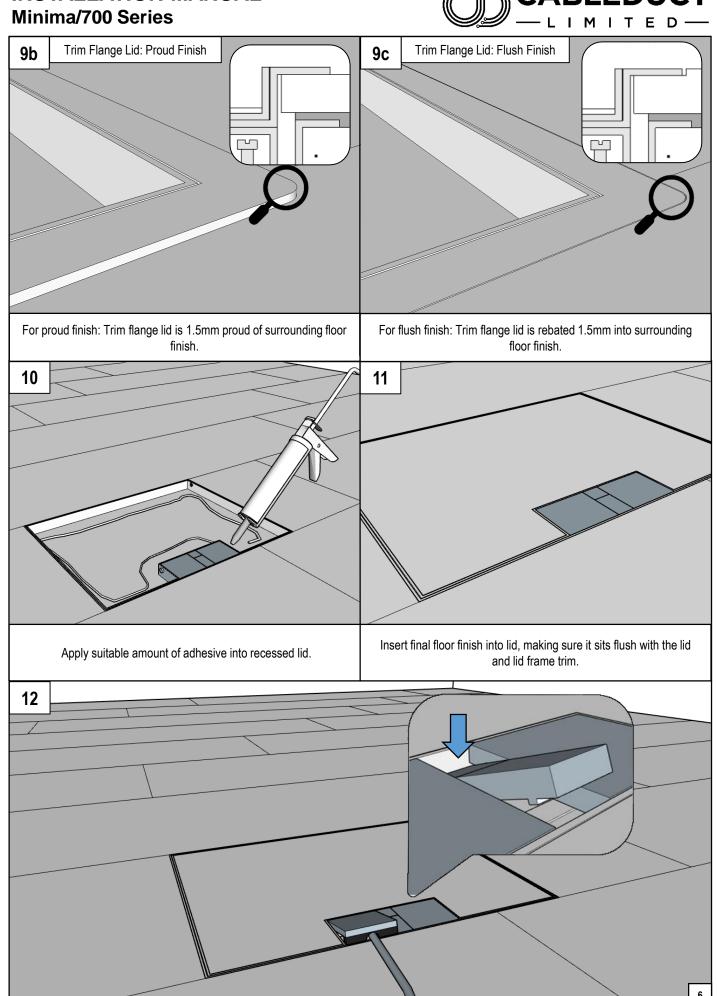



Minima Rectangular Floor Box Dimensions					
Product Code	Compartments	Base Box Dimensions	Base Box Depth	Frame Dimensions	
MIN-M1X1-XX2	1	260x158mm	65³mm, 85mm or 120mm	250x148mm	
MIN-M2X¹-XX²	2	243x260mm	65³mm, 85mm or 120mm	233x250mm	
MIN-M3X¹-XX²	3	330x260mm	65³mm, 85mm or 120mm	320x250mm	
MIN-M4X¹-XX²	4	417x260mm	65³mm, 85mm or 120mm	407x250mm	

Minima Square Floor Box Dimensions					
Product Code	Compartments	Base Box Dimensions	Base Box Depth	Frame Dimensions	
MIN-MSX1-XX2	1*	160x160mm	65 ³ mm, 85mm or 120mm	150x150mm	
MIN-MMX¹-XX²	2	210x210mm	65 ³ mm, 85mm or 120mm	200x200mm	
MIN-M0X¹-XX²	3	310x310mm	65 ³ mm, 85mm or 120mm	300x300mm	

700 Series Rectangular Floor Box Dimensions					
Product Code	Compartments	Base Box Dimensions	Base Box Depth	Frame Dimensions	
SBOX-71 <i>X</i> ¹ - <i>XX</i> ²	1	260x158mm	65³mm, 85mm or 120mm	250x148mm	
SBOX-72X1-XX2	2	243x260mm	65³mm, 85mm or 120mm	233x250mm	
SBOX-73X1-XX2	3	330x260mm	65³mm, 85mm or 120mm	320x250mm	
SBOX-74X1-XX2	4	417x260mm	65³mm, 85mm or 120mm	407x250mm	

700 Series Square Floor Box Dimensions					
Product Code	Compartments	Base Box Dimensions	Base Box Depth	Frame Dimensions	
SBOX-7SX1-XX2	1*	160x160mm	65 ³ mm, 85mm or 120mm	150x150mm	
SBOX-7MX¹-XX²	2	210x210mm	65 ³ mm, 85mm or 120mm	200x200mm	
SBOX-70X1-XX2	3	310x310mm	65 ³ mm, 85mm or 120mm	300x300mm	

 X^{1} There is a choice of three standard base box depths to choose from. Use the following: 6=65mm, 8=85mm & 2=120mm deep base boxes. (i.e M16 = Minima, 1 Compartment with a 65mm base)


Round Profile Lid Floor Box Install Guide Available.


XX² Stainless Steel and Brass are standard finishes. Use the following: ST for Stainless Steel or BR for Brass.

³ Minimum overall depth from top of finished floor to bottom is 75mm.

^{*} One single socket size floor box.




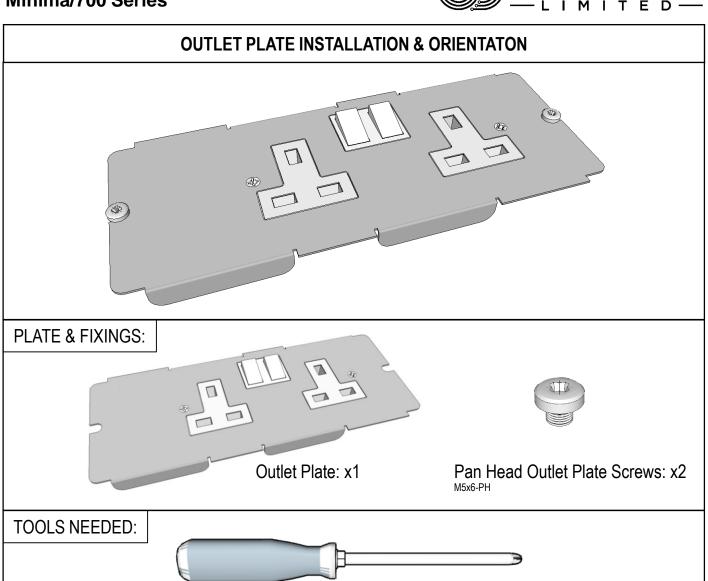

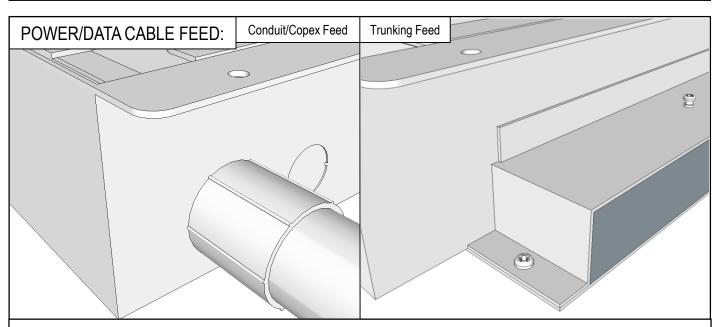


Feed power, data & AV cabling into base box via chosen cabling feed. Base boxes can accept power & data cabling via conduit/Copex or via trunking.



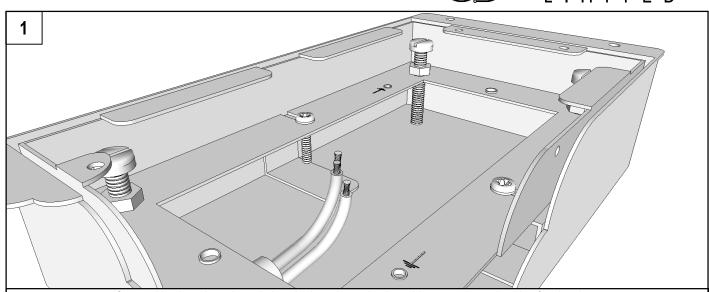


Once cables have been brought into the base box, wire the cables up to the underside of outlet plate.


IMPORTANT: Ensure power and data outlet plates are wired in by a professional and is in accordance with all necessary electrical wiring and data cabling regulations and guidelines.

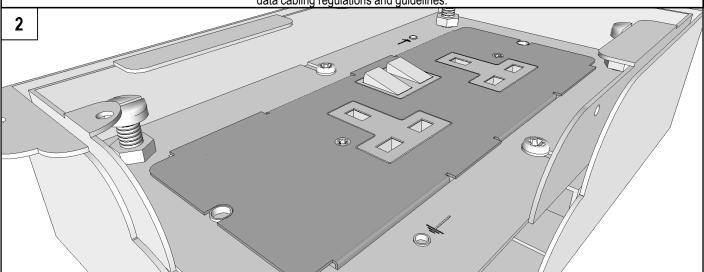


Once the outlet plate has been safely wired up correctly, align plate with compartment mounting holes located on adjustable inner frame.

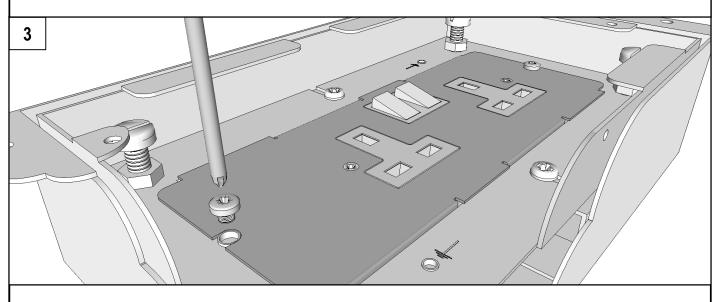



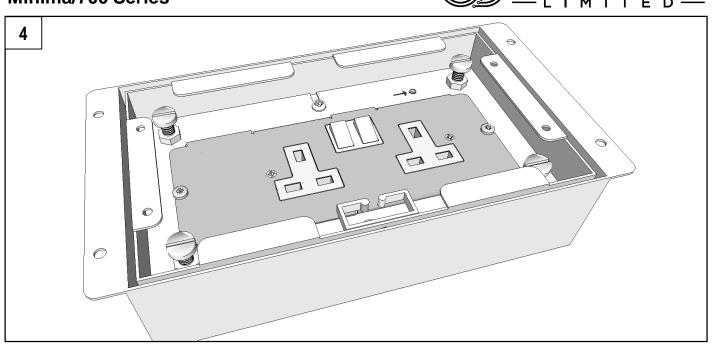


MULTIPLE POWER OUTLET PLATES ORIENTATON

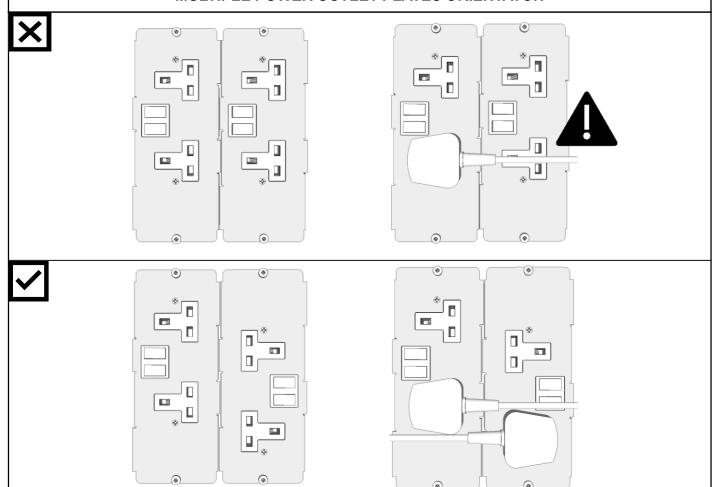


When installing more than one power outlet plate into a floor box, plate orientation needs to be considered to ensure plugs do not interfere from one socket to the next (*Top image*). To help avoid this issue, Cableduct recommends rotating the power outlet plates to stagger the positions of each plug socket (*Bottom image*).






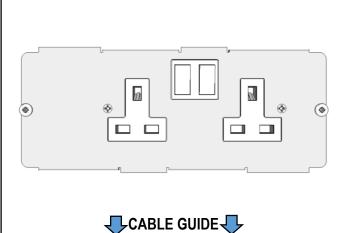


2 Compartments:

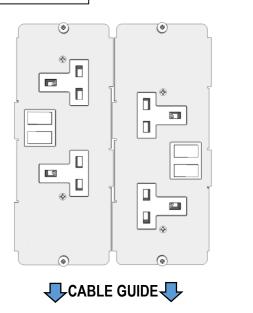


3 Compartments:

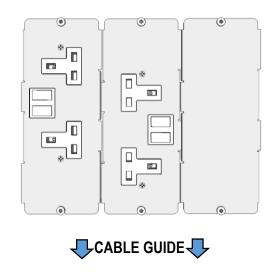

4 Compartments:

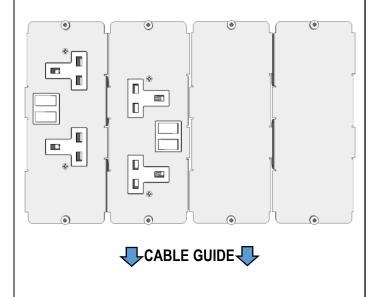

CONTACT US





(o) @cableduct_

@cableduct1

www.pinterest.co.uk/Cableduct_UK

Cableduct Limited

30 Selhurst Road, South Norwood, London, SE25 5QF

England, UK

T: +44 (0) 20 8683 1126 F: +44 (0) 20 8689 7896 E: info@cableductuk.com



